



(Actual Radio Appearance may differ from representation.)

GM

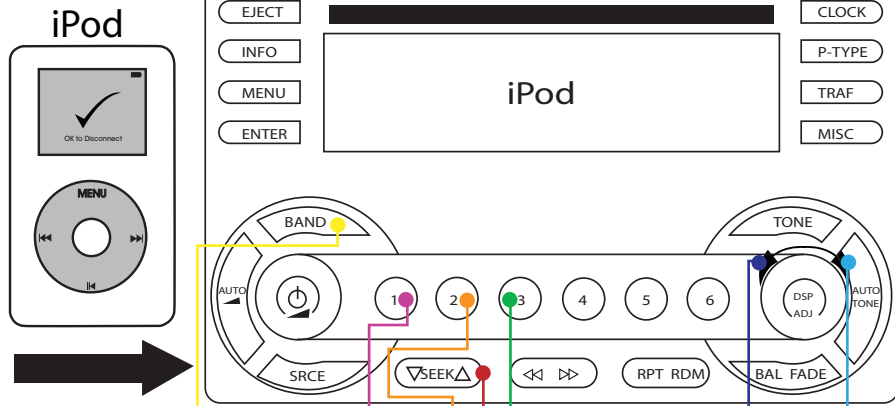

- Band Button.**  
Press until XM is displayed to access the Media gateway.
- Preset #1**  
Press to move back one step in the Browse menu.
- Preset #2**  
a. Press to enter the Browse menu.  
b. Press to select the displayed option and move to the next step in the Browse menu.
- ∇SEEK Δ button.**  
a. Press SEEK Δ to advance to the next iPod song.  
b. Press ∇SEEK to go back to the previous iPod song.
- Tune knob**  
a. Turn Counter-clockwise to go back to the previous track.  
b. Turn Counter-clockwise to go to the previous option in the browse menu.
- Tune knob**  
a. Turn Clockwise to advance to the next track  
b. Turn Clockwise to change to the next option in the browse menu.
- Preset #3**  
Press to exit the Browse menu, without interrupting the currently playing song.


**Browsing Example:**  
To select the song "Star-Spangled Banner" through the Artist category

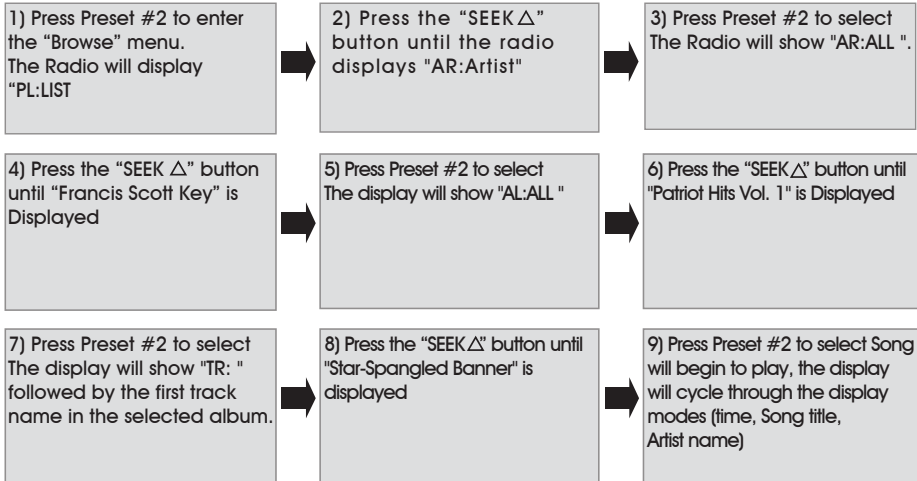

(Actual Radio Appearance may differ from representation.)



QRC011

GM

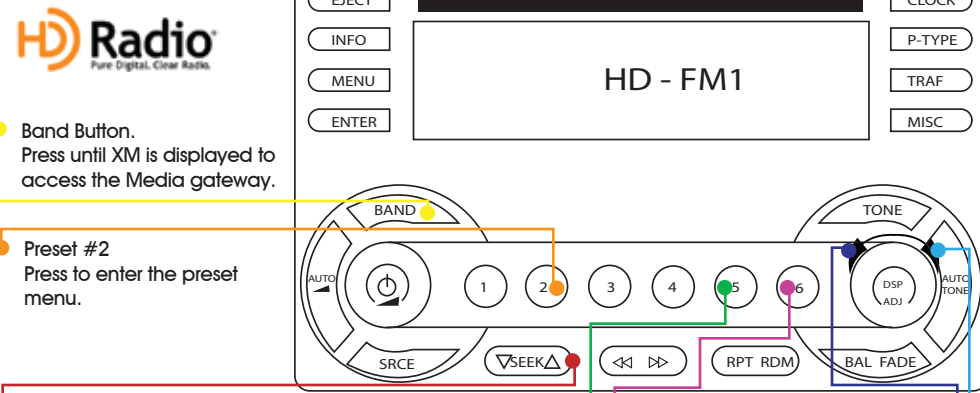


- Band Button.**  
Press until XM is displayed to access the Media gateway.
- Preset #2**  
Press to enter the preset menu.
- ∇SEEK Δ button.**  
a. Press SEEK Δ to seek up to the next station.  
b. Press ∇SEEK to seek down to the next station.  
  
∇SEEK Δ button (when in preset menu)  
c. In the preset menu, press SEEK Δ to recall the displayed station.  
d. In the preset menu, press ∇SEEK to store the current station into the displayed preset location.
- Preset #5**  
Press switch between the AM and FM bands.
- Preset #6**  
Press to toggle the "Tune knob" function, between manual tuning and auto tuning.
- Tune knob**  
a. Turn Counter-clockwise to seek down to the next station.  
b. Turn Counter-clockwise to go to the previous preset in the preset menu.
- Tune knob**  
a. Turn Clockwise to seek up to the next station.  
b. Turn Clockwise to change to the next preset in the preset menu.

**HD RADIO EXAMPLE**  
To select an HD radio station.

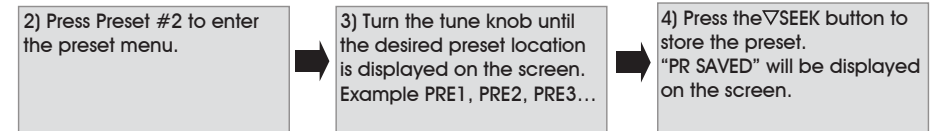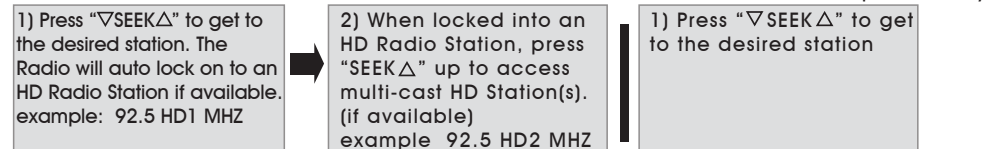

To recall a station stored into preset memory.

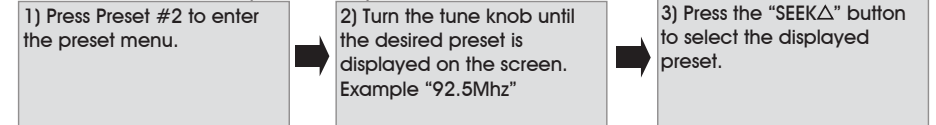

### Changing Modes:

Press the "BAND" button until "XM" is displayed. When you enter the Satellite Radio mode, you will enter the mode select menu. Press the SEEK Δ button to cycle through the available gateway sources (iPod, HD Radio, Aux, and Satellite) When the desired mode is displayed on the screen, press Preset # 2 to select the mode.