




Pacific Accessory Corporation

OS-311 Audio Attenuation for factory Amplified Pioneer Audio Systems

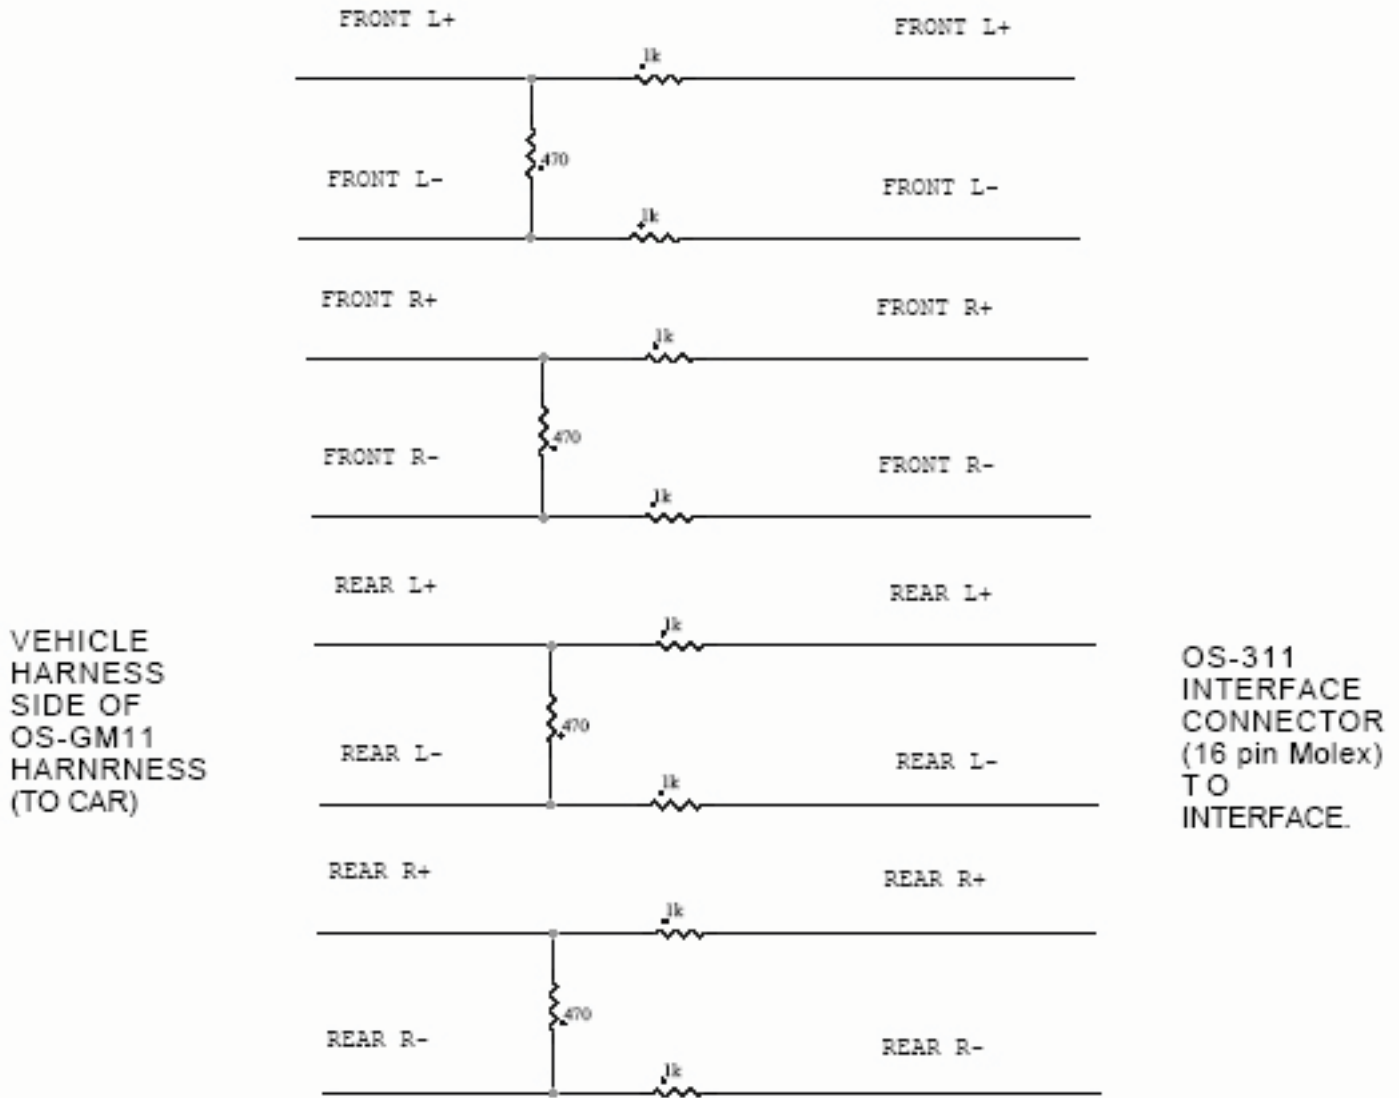

1. Cut each speaker wire in half (FR+/-, FL+/-, RR+/-, RL+/-). This must be done on the Interface2Car connector (OS-GM11).
2. Solder a 1k ohm resistor (1/4 watt, 5% tolerance) in series to reconnect the cut speaker wires.
3. Solder a 470 ohm resistor (1/4 watt, 5% tolerance) in parallel from the + to - wire of the same speaker. This MUST be done on the vehicle harness side of the 1k ohm resistors.