



# Vehicle Connector Chart


2011sonata




caddy1




civic20



civic20\_hondanav16\_hondafl28

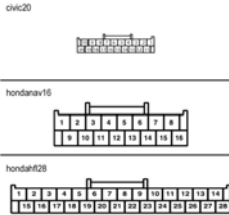


civic24\_hondanav12

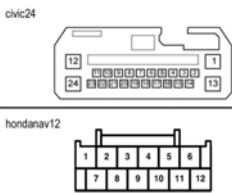


cts




focus




ford20

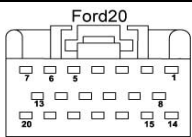


gallant




GM24a

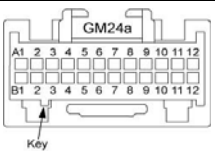

gto

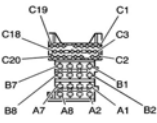


honda20\_hondanav14

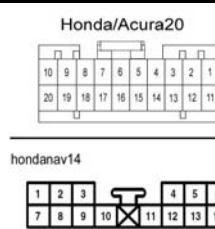


7-pin-olds




Cayenne-Can




Civic20\_Civic22

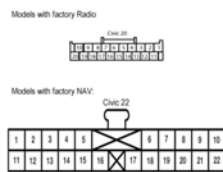


civic22




civic24\_hondanav12\_hondafl28

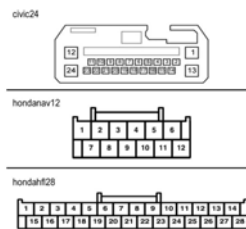


Dock-n-Lock-Can

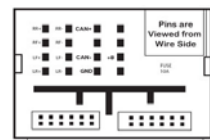


ford16

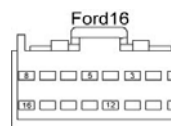


ford24




gm07suv

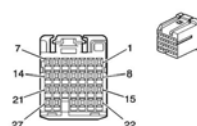


gm32

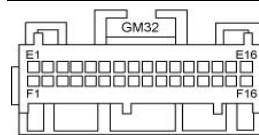


honda16

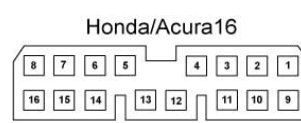


honda20\_hondanav14\_hondafl28

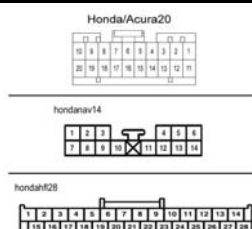


altima162




Chy-Can

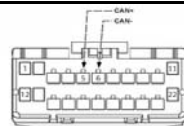


Civic20\_Civic24

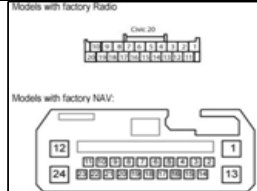


civic22\_hondanav5

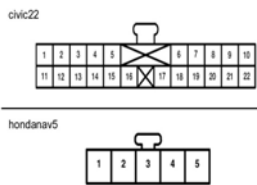


civic24\_hondanav16




hondanav5




eclipse\_new



ford16a

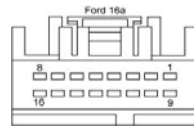


forenza




gm21



gm5

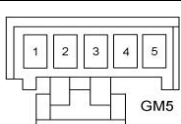


honda20

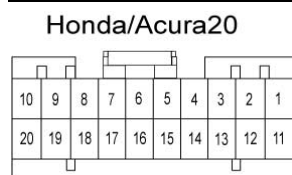


hyundai24




Audi-Can



Chy-Can2




civic20\_hondanav16




hondanav16




civic24

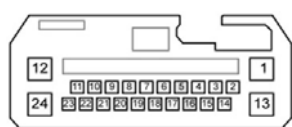


civic24\_hondanav16\_hondafl28

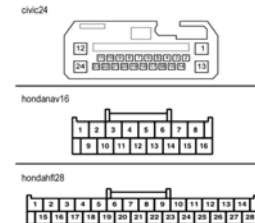

eclipse\_old




ford2




g35




gm24




gm7

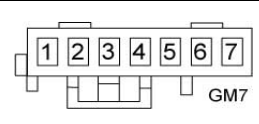


Honda20\_Civic24

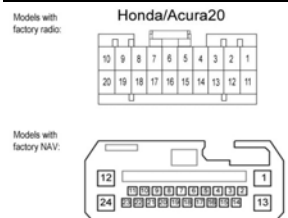


hyundai24b




hyundai3




HyundaiEuro




i26




i50



isuzu




kia




kia-12\_24




Legacy




maxima16a




maxima16b




maxima16b\_nissan32bt




maxima16c




mazda14

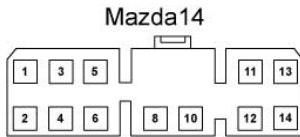


mazda24

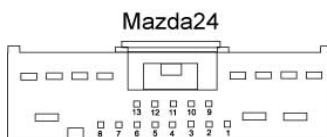


mazda24\_mazdblue24




mazda24\_mazdblue28

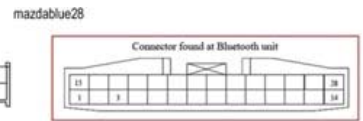


Mercedes-Can




Mercedes-Can-2




Mercedes-Can-3

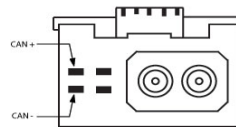


Mercedes-Can-4

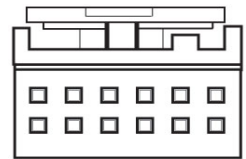


newkiahyundai



nissan08




nissan08\_nissan32bt




nissan350z




nissan350z\_nissan32bt




NissanNAV




outlander




pontiac40pin

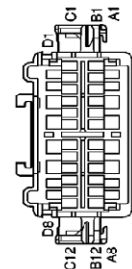


saab22




saab25




saab32

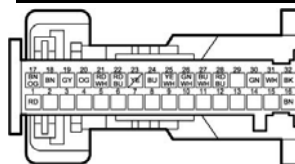


solstice

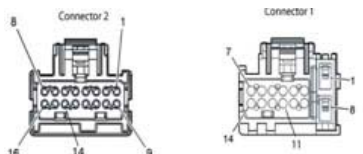


sorento-without-amp




sts




suv

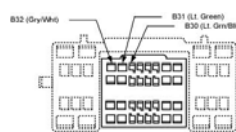

suzuki




titan




toyota




trailblazer



vw



VW-Can

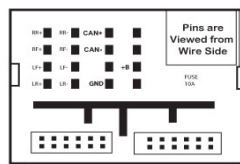

xterra2



Visit <http://www.pac-audio.com/swi/> and click on "Downloads & Instructions" to download this sheet.

Smart Phone users can visit our [Mobile Steering Wheel Interface](http://www.pac-audio.com/m/) website at <http://www.pac-audio.com/m/>